
## NCR ATM Plinth Assembly Instructions & Checklist

Each NCR Plinth Assembly will ship with the following:


- a) 1 Base Plate
- b) 1 Top Plate
- c) 4 Leg Plates\*
- d) 1 Hardware Kit\*\*
- e) Quality Control check list\*\*\*
- \* ATM Plinth assemblies may contain different size Leg plates to accommodate greater height ranges.
- \*\* Hardware Kit may include different size thread rods to accommodate greater height ranges.
- \*\*\* Please provide Checklist when concerning quality issues.

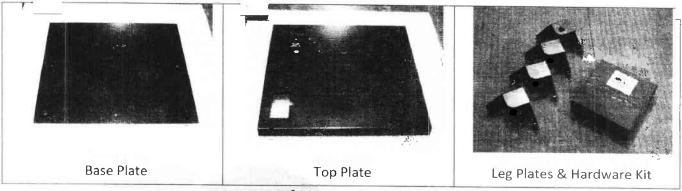


Pictures are re erence on . Part size and shape may vary

## Assembly Instructions:


1.) Place Plinth base plate in the appropriate location, refer to NCR Site Prep instructions.

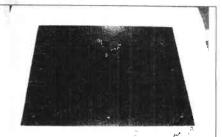


2.) Install appropriate thread rods into base plate to meet height requirements. Threaded rod must be installed fully into the hex nuts that are welded on the base plate.

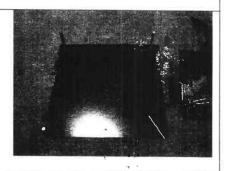

3.) Install first set of hex nuts on threaded rods. These will be adjusted later to meet required height requirements.

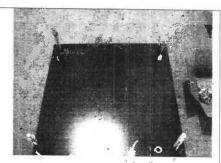


4.) Install appropriate leg plates to top plate using supplied hardware. 4 bolts and lock washers per leg plate. Bolts must be tightened to insure proper construction.

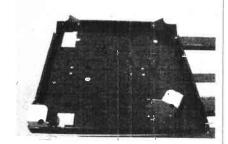

5.) Install top plate assembly on base plate assembly. Using the first set of hex nuts adjust top plate surface to meet appropriate height requirements.



6.) Install second set of hex nuts and tighten to leg plate to lock top plate assembly into position.

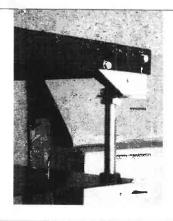

Plinth Packa in Check List

Packaging includes:

Base Plate:

Top Plate:

Leg Plates:

Hardware Kit

Packaging Date: 10.24-of
Checked Ry:

Checked By: