

Changing Server Address in Persona ATM

Changing Persona ATM's Server IP

1. Set the NORMAL/SUPERVISOR switch to SUPERVISOR.
2. This should bring you to the "Replenish" menu. NOTE: If the display shows a Fault Status message, press the CNL or CLR key to access the "Select" menu. Then select option 5 for the "Configure" menu.
3. From this menu select number 99 MORE. This will take you to the second page of the Configure menu. From here select number 37 TCP/IP CONFIG.
4. To change the server IP select number 0 RMT ADDRESS. Then type in the new IP address pressing ENT after each segment is input.
5. Press CNL 2 times after you have input the new server IP and the ATM will prompt you to Press CNL to continue or ENT to reboot ATM.
6. Select ENT and the ATM rear display should display "Committing Network Settings" and then reboot.