

# NCR ATM's

## Setting the Auto Exit and Initial Entry Mode

1. Put the ATM in supervisor mode. This should be the "Select Menu".
2. Then select number 6 "Access". From this menu select number 3 "INIT ENTERY" there will be a prompt at the bottom of the menu. Then press 1 ENT (the enter key). Once you press this the menu will change and display the change of the value for the initial entry screen, it will display INITIAL ENT= REPLEN.
3. Press then enter key again and it will take you back to the Access menu.
4. Press number 5 for "Exit Mode" there will be a prompt at the bottom of the display and again you will press 1 ENT (the enter key). Once you press the menu will change and display the change of the value for the exit mode, it will display EXIT MODE = AUTO.
5. Press the enter key again to get you back to the "Access Menu".
6. You then will select number 13 "SET ACESS" this will set the values you entered so they won't go back to the defaults after a reboot.

This has now set the entry screen to the "Replenish Menu" and auto exit is enabled where you will not have to enter 9 to exit supervisor mode.