

NCR SS34 Volume Configuration

Enter Supervisor Mode.

Replenish Screen will launch.

Press the red CNL button.

Press 7. Diagnostics

Press 8. Self Service Configuration

Press 3. Set Device Configuration

Press 9. Page Down

Press 3. Sounds

1. Master Volume (0-255)
2. Wave Volume (0-255)
3. Midi Volume (0-255)