

## Topaz Signature Pad

9/13/07 (Updated 07/10/2012)

1. SigPlusPro should be located at c:\dragon\setup\drivers\topaz, but it can also be downloaded from <http://topazsystems.com/Software/download/sigplusactivex.htm>
2. During the hardware install wizard select:
  - a. T-L
  - b. T-LBK766
  - c. HSB
3. Transact Universal Driver (This can be downloaded from [tranact.com](http://tranact.com))
  - a. add device,
  - b. pick TCP Port for sig pad, eg 3334
4. download and install: [www.jpegger.com/SigConfig.sfx.exe](http://www.jpegger.com/SigConfig.sfx.exe) (case sensitive)
5. run Sigconfig –
  - a. add contract
    - i. ID = 1 (only contract # supported by Scrap Dragon)
    - ii. Name = your choice, eg. purchase
    - iii. jpegger field = receipt\_nbr.
  - b. add jpegger site, IP is jpegger – large yards can have multiple jpegger sites
  - c. Update All
6. in Dragon, local options, peripherals
  - a. check signature pad
  - b. IP address is the computer where pad is attached, usually 127.0.0.1
  - c. Port is the port # assigned to the sig pad in T, eg. 3334